

Your new angel board has the ability to be used in any angel from the LCD to the newest release that is available.

We designed a system of break-away TABS to aid in the install. These TABS can be removed with a set of pliers or side cutters that are available at any hardware store. There is a good chance that you already have these tools since they are a commonly used item.

We have already installed 2 operating systems on your new Predator to take advantage of how the 05 speed uses a standard battery on/off and no back buttons. No extra wiring is needed. A simple flip of a switch tells your new Predator that it has been installed into an 05 Speed.

For any Angel after the A4 fly (05 speed, G7 etc) you will need to remove or flatten the leaf spring that is attached to the back of your trigger. During our initial testing we found that most players preferred the trigger to have direct contact with the micro switch instead of having the spring come in contact with the micro switch. This setup gives the player a more natural feel. If you prefer to leave the leaf spring on the trigger you can push it as flat as you can get it against the back of the trigger. To remove this spring a set of vicegrips and some determination is all that is needed.


**IR3 - SPEED - A4 - A4 FLY - G7
INSTALL**



IR3 - G7 Install (not the 05 speed)

1. Dip switch 4 must be off
2. Tab 1 is removed
3. Tab 2 is removed
4. Jumper in place


LCD INSTALL

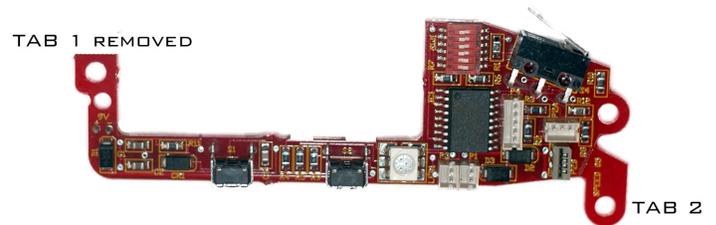

LCD Install

1. Dip switch 4 must be off
2. Tab 1 is removed
3. Jumper in place

05 SPEED INSTALL

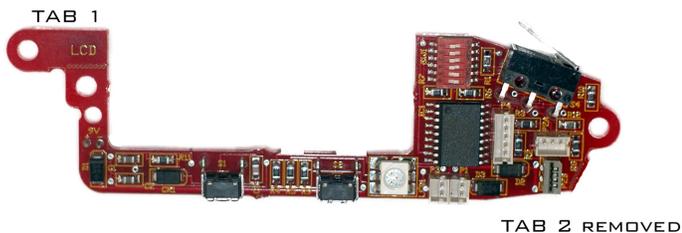

05 SPEED

1. Dip switch 4 must be ON
2. Tab 2 is removed
3. No jumper (on/off harness will plug into this port)

